

How to update The Ripper

1. Download the new firmware to a USB stick or memory card.
2. Connect the USB stick or memory card to The Ripper.
3. After a few seconds the red light lamp and the display indicated that The Ripper is being updated.
4. The update is finished after a moment and you can easily start using the Ripper again.